

ACTION CAMERA

BEST UNDERWATER SETTINGS

Before You Dive

Initial Setup Requires
WiFi & Smart Phone

Activate & update your camera before you go on your trip
Always **FORMAT** your SD Card instead of deleting files



VIDEO SETTINGS

Basic Settings:

Resolution: 4K or 1080p
Frame Rate: 60fps or 30fps
ISO: Auto
Exposure Comp: -0.3 to -0.7
White Balance: Auto
Picture Profile: Standard
Stabilization: Default/Standard

Display Settings:

Brightness: 100% or 50% (for darker conditions)
Screensaver: Off
Auto Power Off: 5-10 minutes
Quick Capture: On

Shooting Tips:

- Practice good buoyancy skills
- Capture **VERTICAL** video in-camera for social media
- Shoot in bright conditions with the sun at your back
- Use your camera's apps for easy edits



Scan To Learn More

GearTips:

- Looking to protect and accessorize your action camera? Use a good housing that is compatible with lenses and filters.
- For steadier, smoother, more professional looking footage, get two hands on the camera system with a double handle tray.
- Tired of washed out, cyan footage lacking color and contrast? Use high-quality color filters to bring out bold colors at depth in your video.
- If you want to take your footage to the next level, use a wide angle lens for wider, sharper, more epic looking video.
- For tack-sharp, super close-up footage of small critters, use a macro lens designed for underwater use. Add a video light and a tripod for vibrant colors and rock-solid clips.
- To boost exposure in dark scenes and to provide better color for wide angle video, use two video lights with wide beams.