



## WIDE HANDLE & TRAY ARCH INSTALLATION

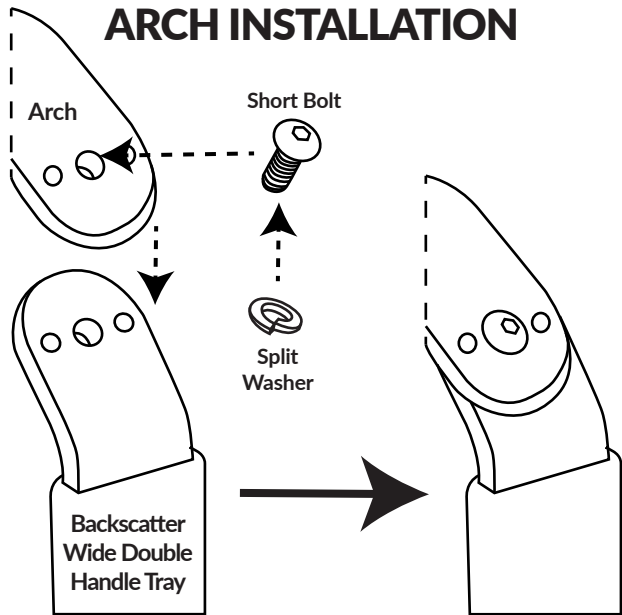

USE SHORT BOLT FOR NO ARMS

## WIDE HANDLE & TRAY ARCH INSTALLATION

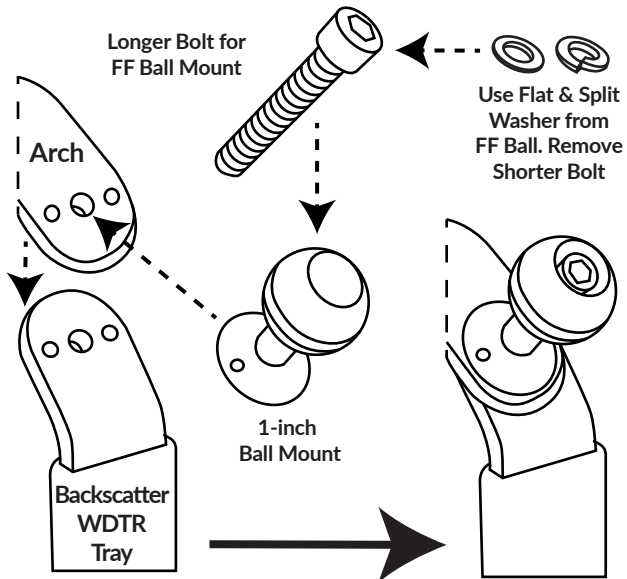

USE LONG BOLT FOR BALL MOUNTS